

Driver Installation Manual

1.Introduction

Installing the driver is necessary to connect the Mac or PC(Win) and the aFrame.
Driver's name is CP210x USB to UART Bridge VCP Drivers.
Driver software can be obtained from the site of the following URL.

SILICON LABS

<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>

2.Mac

Step1: Above URL site, choose Download for Macintosh OSX(v4) and download.

Step2: In the download dmg files, click pkg and install.

3.Windows

Step1: Above URL site, choose Download for Windows 7/8/8.1/10(v6.7.4) and download.

Step2: Unzip CP210x_Windows_Drivers.zip file.

Step3: Double click CP210xVCPInstaller_x64.exe or CP210xVCPInstaller_x86.exe, and install. (Please choose the proper installer for your computer.)